

Device Name	
Alcatel 511	Alcatel
Alcatel One Touch 311	C1
Communicator 9210	Ericsson 688-T18
Ericsson T28	Ericsson T20-T29-R520-T39
Ericsson T65-T68	LG Mobile
LG K800	Mitsubishi Trium
Motorola Accompli	Motorola Startec
Motorola V60 - V70	Motorola V3
Motorola V3X - V3i	Motorola Rokr E6
Nokia 6110,8210,8850,3210,5110,8110,2110i,3330,3310	Nokia 6210-9110
Nokia 8310-6310- 6610	Nokia 3650
Nokia 7650	Nokia 2100-2110-2300-3100-3108-1100
Nokia 2600	Nokia 1600
Nokia N-Gage 1	Panasonic 600
Panasonic G450	Panasonic G500
Phillips	Sagem
Samsung 200	Samsung E310 - E700 - A800 - V206 - E800 - N700 - V200
Samsung 600	Samsung U600
Samsung X820	Siemens S10-S25-S4
Siemens C35	Siemens C25
Siemens ST 55	Siemens M65
Siemens CX 65	Siemens SK 65
Siemens SF 65	Siemens S65
Siemens S45	Siemens C30
Siemens SL55	Sony Z5
Sony J70	Sony Ericsson P800
Sony Ericsson T610	Sony Ericsson K500-K700-S700
Sony Ericsson P910	Sony Ericsson T290i-T230-Z600-T300
Sony Ericsson T100	Sony Ericsson T630
Sony Ericsson T66-A2628	Sony Ericsson W550-W810
Sony Ericsson P990i	Sony Ericsson P1i
Sony Ericsson W330i - W890 I- K770i	Samsung U700
Samsung G600	Sony Ericsson C902