



HUWAEI – 4G LTE

Dongle Installation for Windows

- Plug the dongle
- The PC will install the USB driver

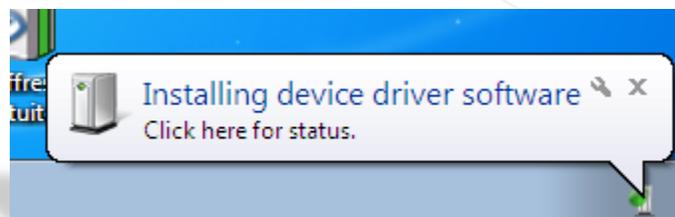


- Select **Run AutoRun.exe** from the **Auto Play** window

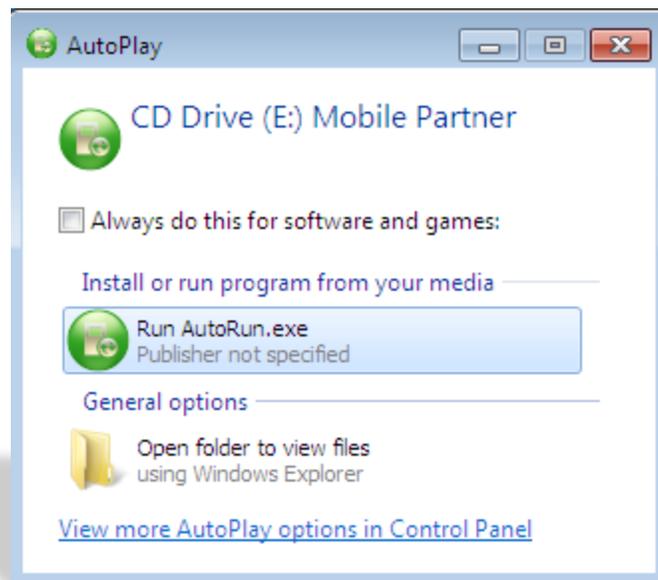




Mobile Partner Setup window:

- Select Next

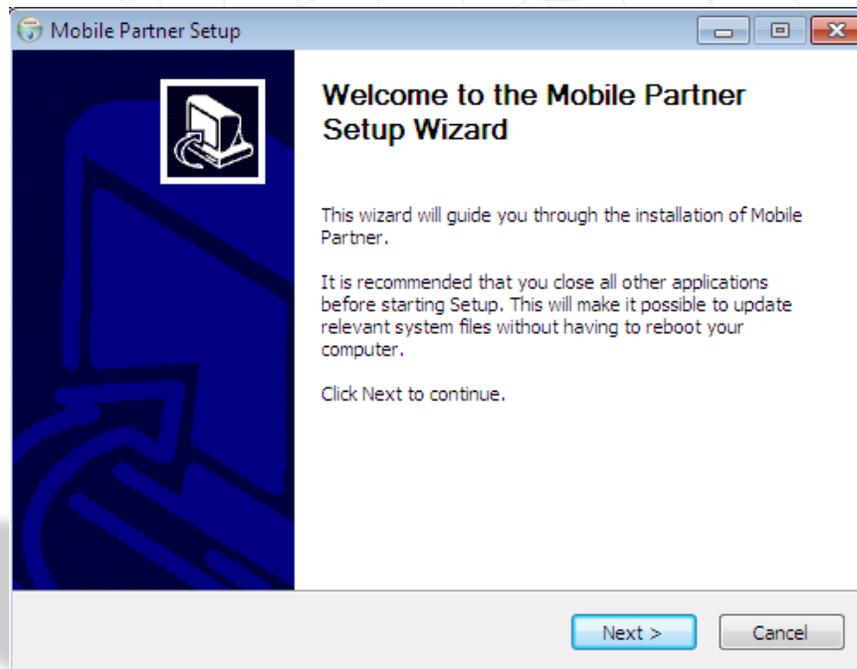

License Agreement page


- Select I Agree

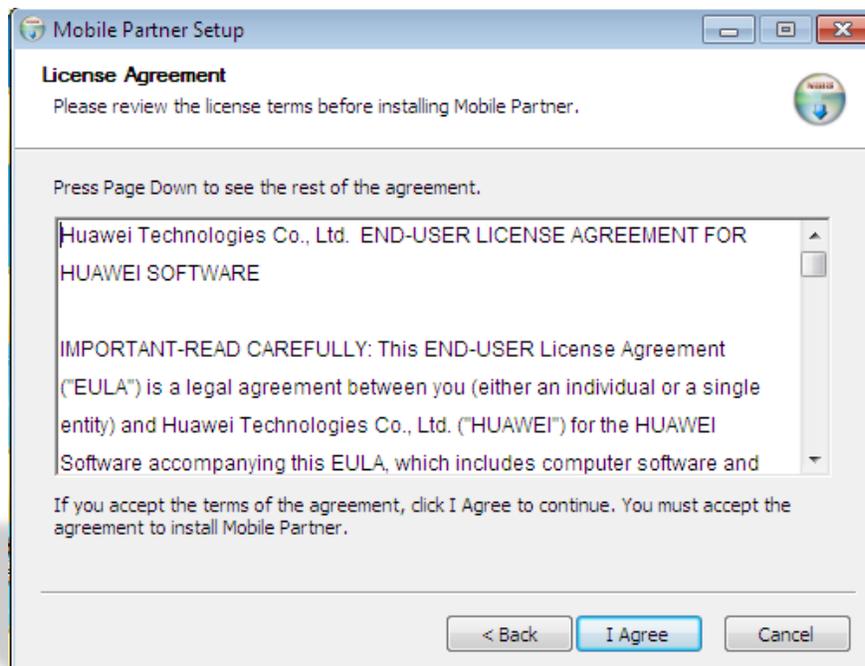




Choose Install Location page

- Select the Location (Keep it as it is recommended)
- Click **next**

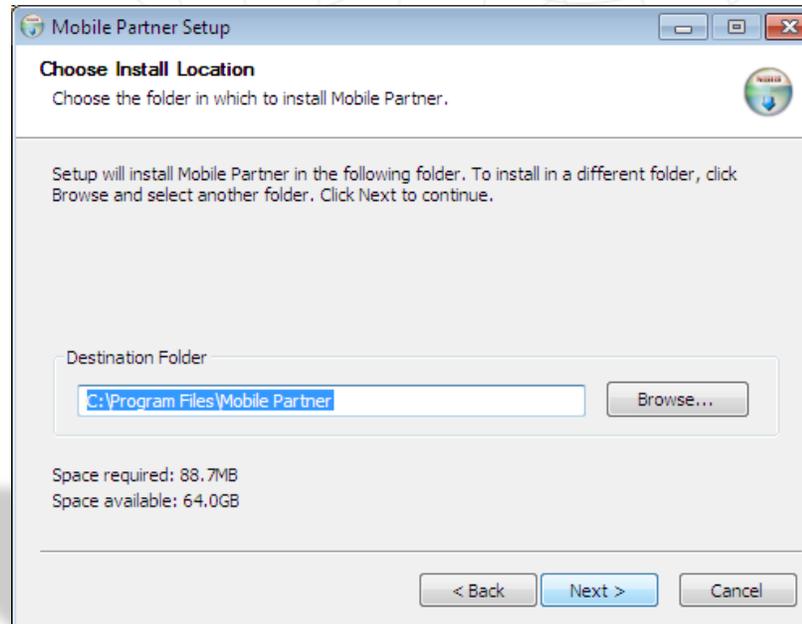


Choose Start Menu Folder page

- Select **Install**

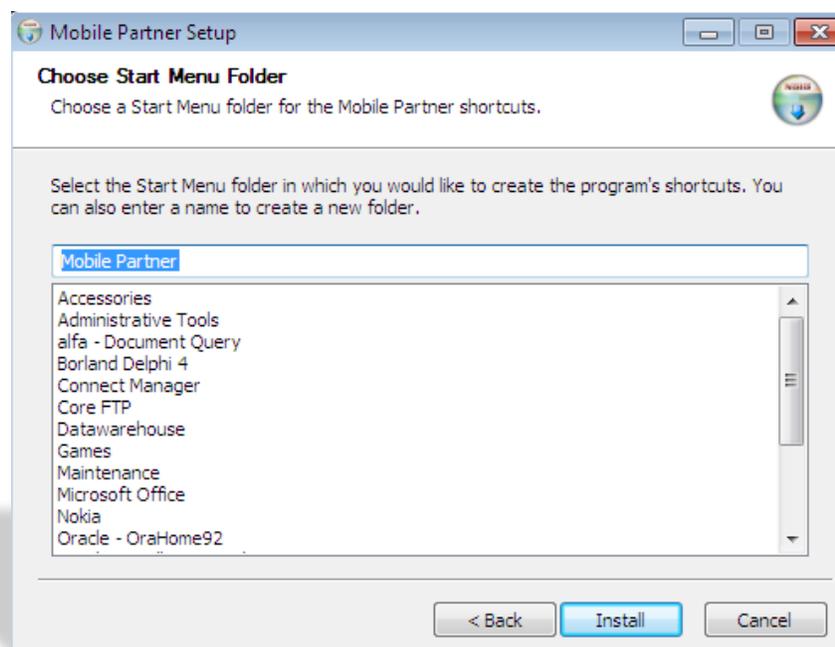


Wait for the installation to complete

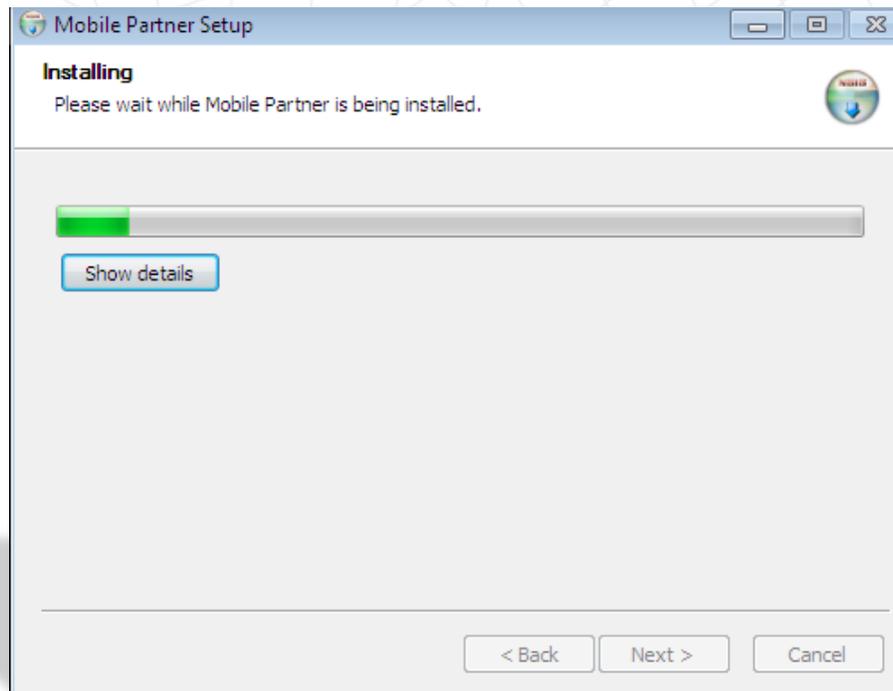


Completing the Mobile Partner Setup Wizard page

■ Select Finish

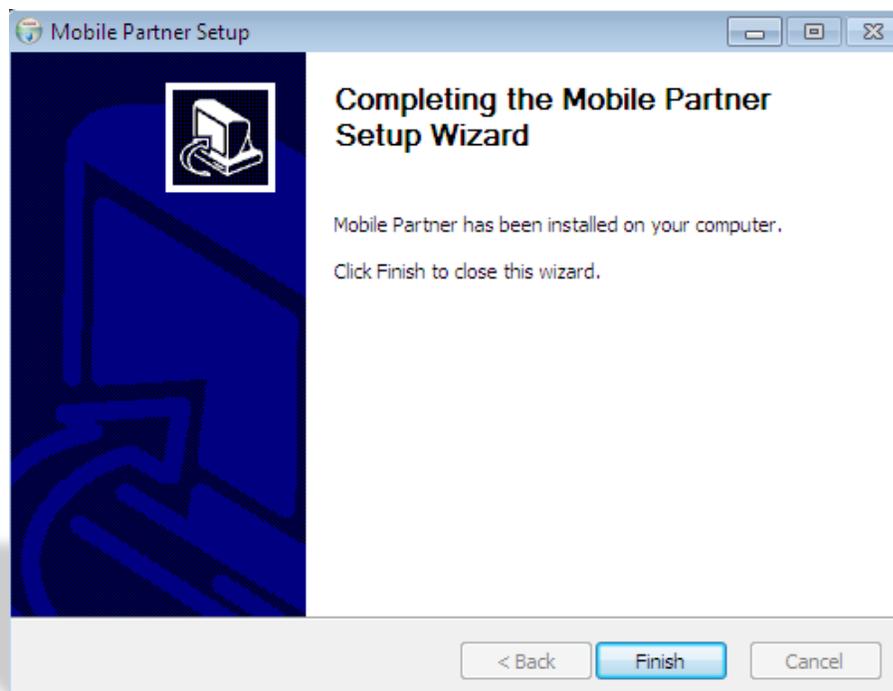


The software will run automatically and the signal will be shown on the bottom left corner

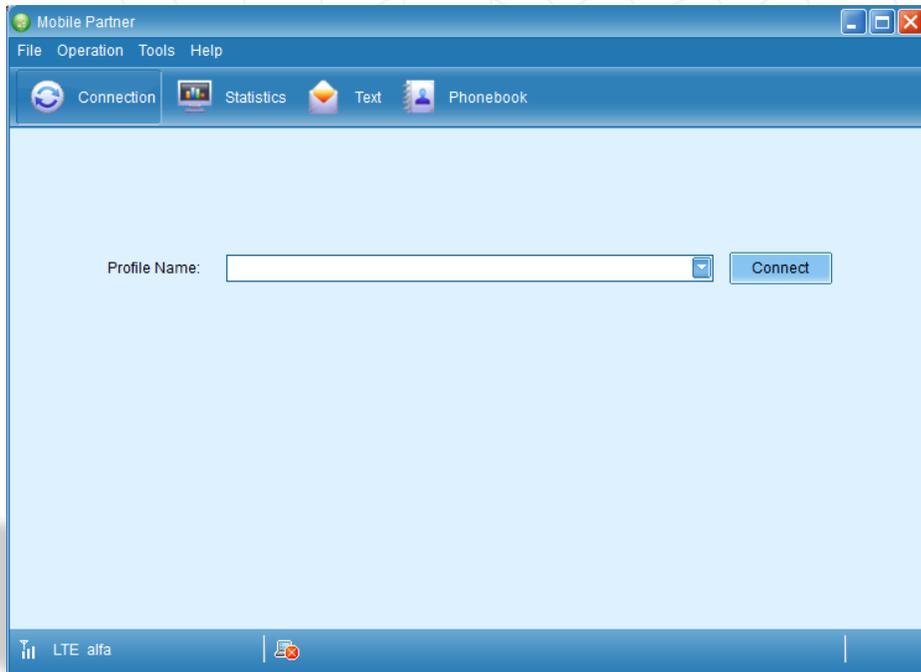

Mobile Partner menu


- Select **Tools**
- Click **Options**

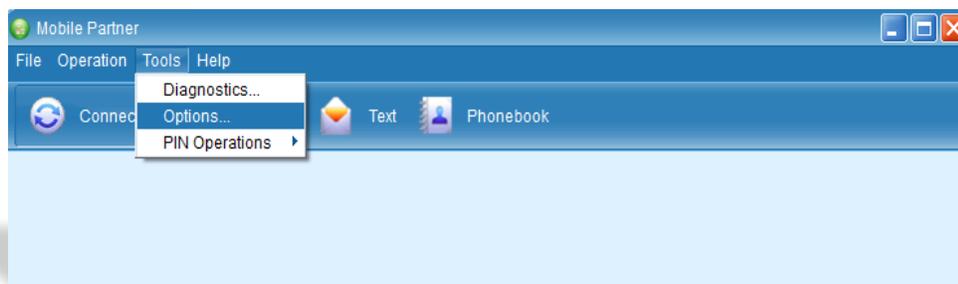



Options window


- Select **Network** from the left box
- Click the **Network Type** tab
- Choose to lock to **LTE, 3G, 2G** or **Auto**

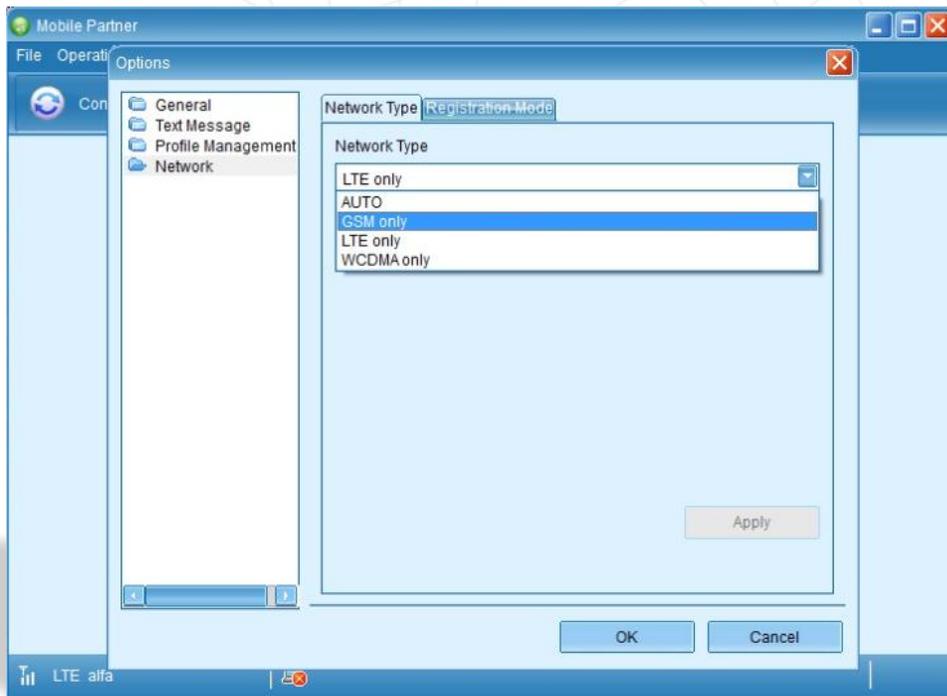



Continue in the options window


- Select **Profile Management** from the left box
- Click **New** in the **Dial Up** tab

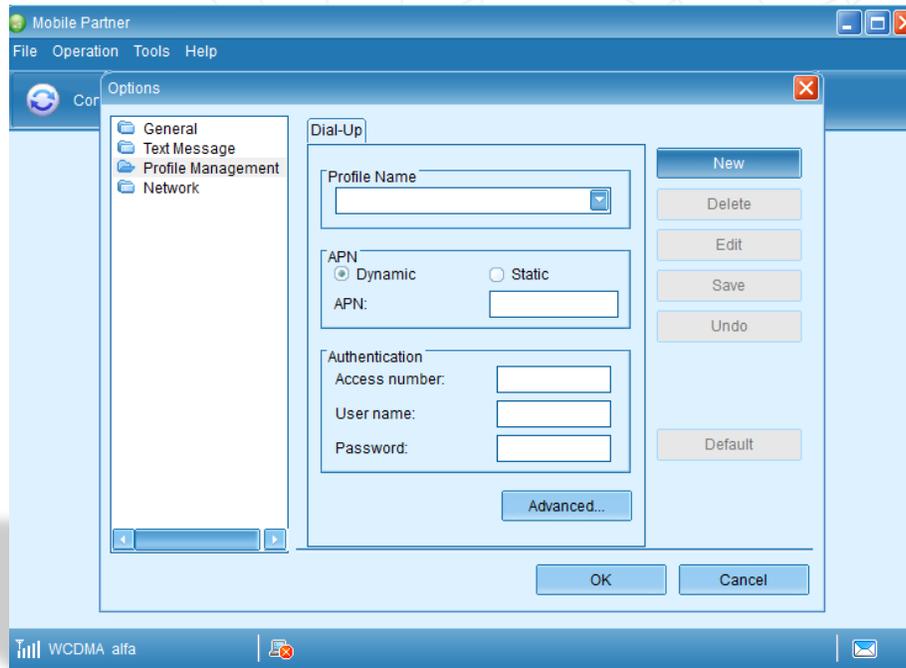




Fill the **Dial-Up** page

- Profile Name: **Alfa LTE**
- APN: - **Static**
 - APN: **usb.mic1.com.lb**
- Authentication:
 - Access number: ***99#**
- Click **Save** then **Ok**

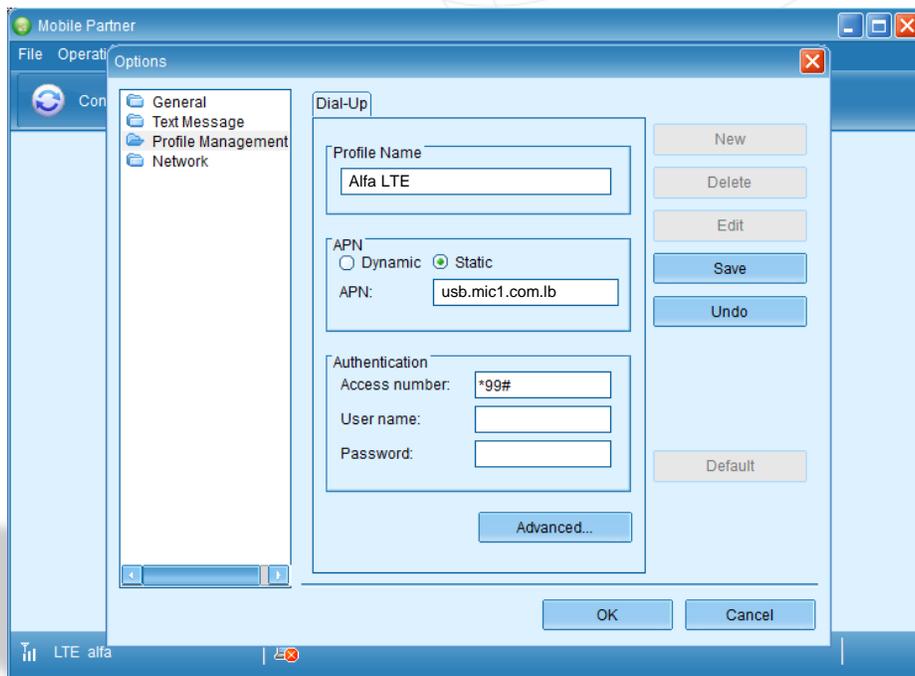



Mobile Partner will look as shown below, wait until **LTE alfa** appears in the bottom left of the window

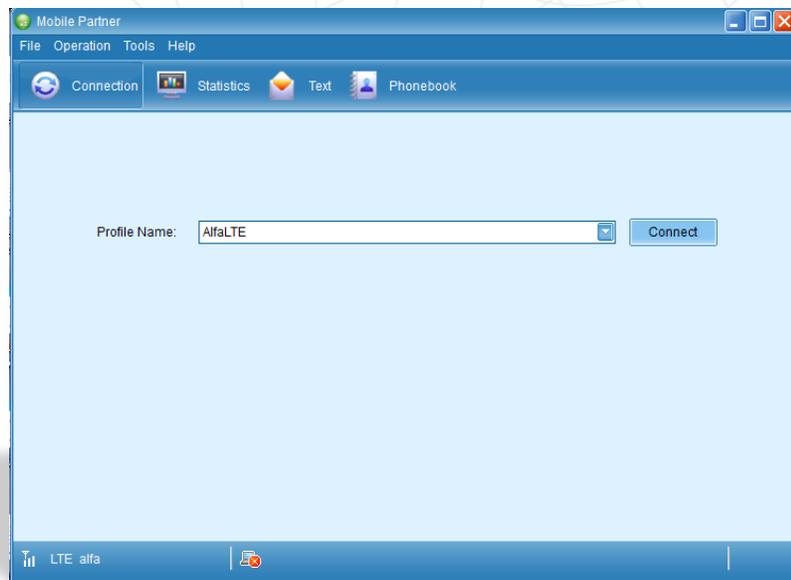

Upon connection the **Mobile Partner** will look as depicted below

